

Ceramic Kettle

A120764

INSTRUCTION MANUAL



Please note this item is not a teapot and should not be used as such.

Do not place the tea bags in this kettle!

To avoid damage or hazards as a result of improper use, read this instruction manual carefully before operating the appliance. Take care to follow the safety instructions at all times.



Components

- | | |
|-------------------------|-----------|
| 1) Lid | 2) Kettle |
| 3) Indicator | 4) Base |
| 5) Power cord with plug | 6) Handle |
| 7) Switch | |

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is designed for domestic use only and not for commercial applications. No responsibility is accepted for damage resulting from improper use or noncompliance with the instructions.
- Please keep these instructions for future reference. If the appliance is passed to another person, this instruction manual should accompany it.
- Before inserting the mains plug into the socket, check that the mains supply voltage and current rating corresponds with the power supply details shown on the appliance model label.
- Never allow the base or the kettle to make contact with or be immersed in water. However, should this happen, have the unit examined by a qualified service centre before using it again.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord.
- Do not operate the appliance if
 - the appliance or power cord show any signs of damage,
 - the appliance has been dropped.
- Always remove the plug from the wall socket
 - after use
 - in case of any malfunction,
 - before cleaning.
- When removing the plug from the wall socket, never pull on the power cord.
- Children do not recognise that may occur when operating electrical appliances. Therefore keep children away from such appliances.
- Do not attempt to remove any parts of the housing nor insert any metal objects into the interior of the appliance.
- To prevent damage to the power cord, do not let it pass over sharp corners or edges.
- Do not position the appliance or power cord on or near hot surfaces (such as oven plates) or near open flames.
- Do not expose the appliance to rain or moisture and do not operate the appliance outdoors or

with wet hands.

- Use only clean cold water, and let the water run for approx two minutes before filling.
- The appliance operates at very high temperatures, Caution: there is danger of scalding from escaping water or steam. Do not touch any part of the kettle except the handle when the appliance is in use and ensure that the lid is properly closed
- This appliance is designed for heating water only. Never put any other liquid into the kettle.
- When using the appliance, always pay attention to the water level marking on the outside of the kettle. Do not let the water level drop below the minimum level and do not exceed the maximum level.
- Always place the appliance on a firm and level surface.
- If electric kettle is not water. Please do not open “0/1” switch.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

The kettle is only to be used with the stand provided.

- Warning: If the kettle is overfilled, boiling water may be ejected.

OPERATION GUIDELINES

Before using for the first time

- Prior to initial use, clean it by going through several boiling cycles, using clean water with each cycle and filling the kettle to its upper marking. The water will reach boiling point after approximately 5 minutes, when the unit switches off automatically.

Operation

- Place the heating base on a firm and level surface.
- Pour the desired amount of clean water into the kettle. Do not touch any part of the kettle except the handle when the appliance is in use, and ensure that the lid is properly closed. The amount of water can be measured by the level mark on the outside of the

kettle. Always pay attention to the minimum and maximum levels and ensure that the lid is properly and firmly closed.

- Position the kettle in such a way on the base that the underside of the kettle fits precisely into the contact unit on the base.
- Insert the plug into a wall socket.
- Put the 0/1 switch to its 1 position to start the heating process. The indicator lamp will light up.
- As soon as the water reaches boiling point, the 0/1 switch return automatically to the '0' position. The indicator lamp will go out. The water kettle can also be switched off manually by putting the 0/1 switch to the 0' position.
- The hot water may now be poured safely through the spout into another container.

Safety cut-out

- This kettle is equipped with a safety cut-out to protect the appliance from damage in case of inappropriate use. Should the appliance be accidentally operated without water, or if all the water has evaporated, the safety cut-out will automatically switch off the heating element
- In such a case, remove the plug from the wall socket immediately and refill the kettle only after an adequate cooling down period. About 15-20 seconds

Decalcifying

- Should the appliance switch off before reaching boiling point. This is a sign that decalcifying is necessary
- Any regular descaling agent may be used, provided the relevant instructions are observed. Do not fill the kettle to the upper mark to avoid spillage if the descaling agent causes the water to foam.
- To clean the kettle thoroughly of any decalcification residues, let it go through several boiling cycles, using clean water with each cycle. Rinse the kettle with clean water afterwards

CLEANING AND CARE

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- Do not use abrasives or harsh cleaning solutions.

- Do not immerse the base or the kettle in any liquid, To clean the exterior, a slightly damp, lint-free cloth may be used
- It is advisable to remove lime deposits form the kettle at regular intervals.

SPECIFICATIONS

Supply voltage: 220-240V~ 50-60Hz

Power consumption: 1300-1500W

Model No: A120764

Capacity: 1.0 L

Production Date: Dec 20th, 2011

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Imported by : S & S Enterprises Ltd.

26 Perivale Park,

Perivale, UB6 7RL



Made in China